


КА СС 71 144 020











ИНСТРУКЦИЯ ПО МОНТАЖУ комплекта электропроводки для фаркопа с 7-ми контактной розеткой (ГОСТ 9200-76)

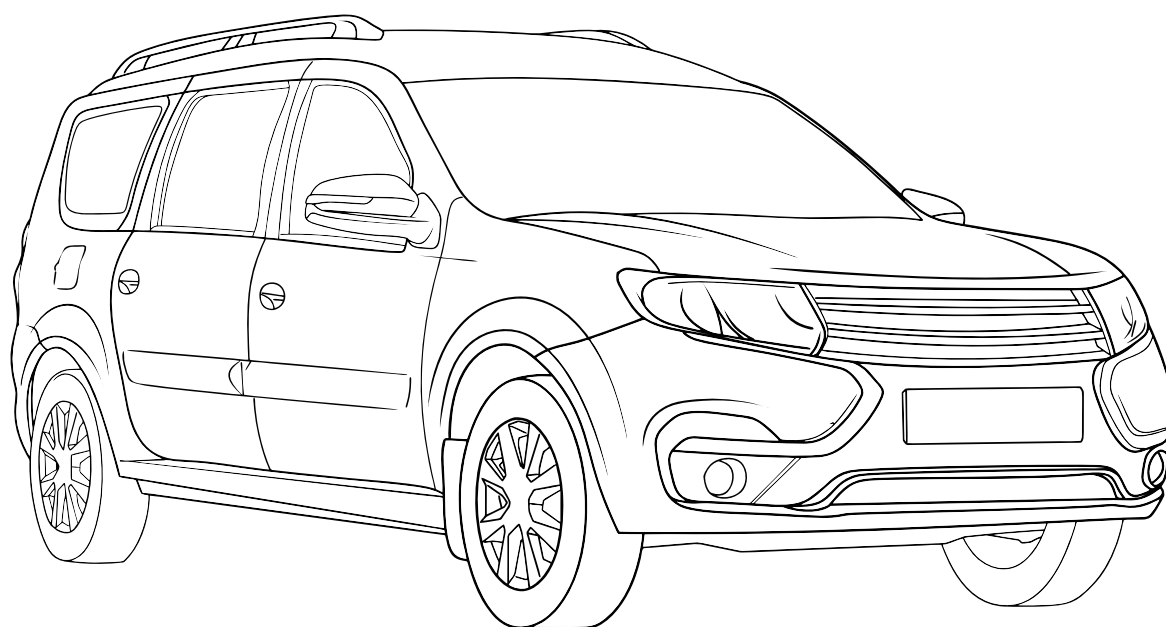


Для Lada Largus 2021-



- 1.
- 2.
- 3.
- 4.




!

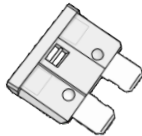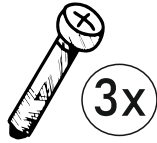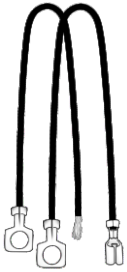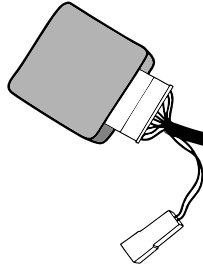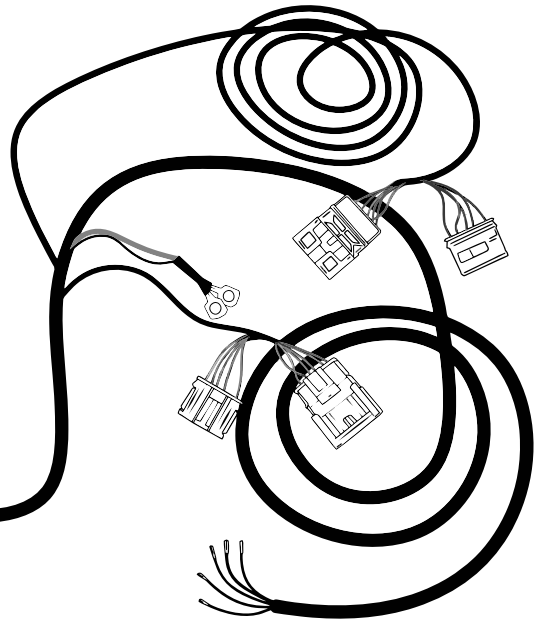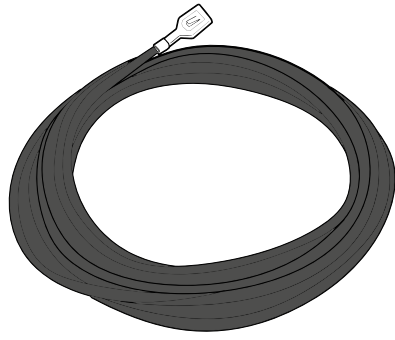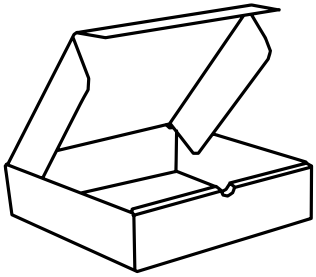




3x




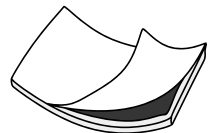




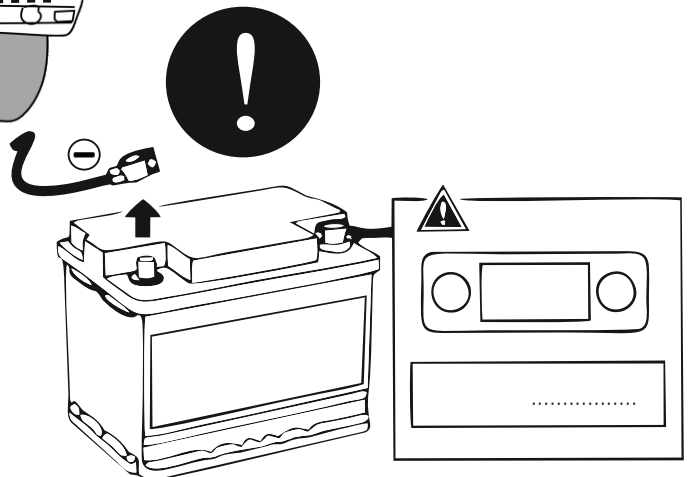
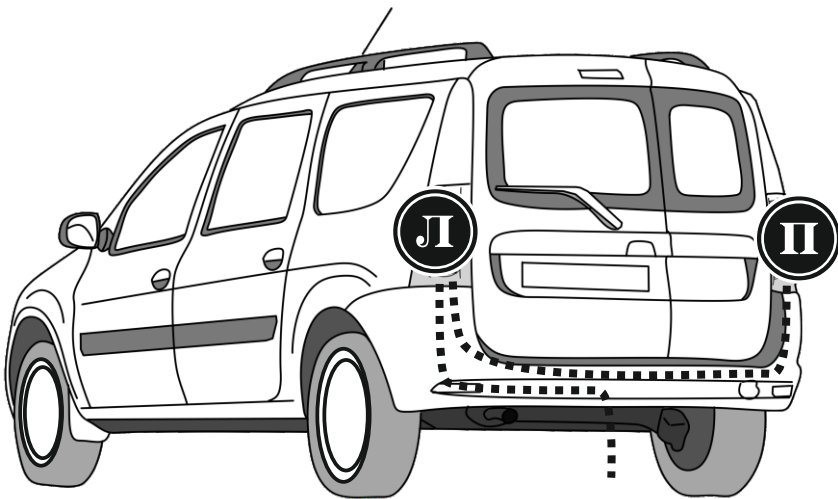




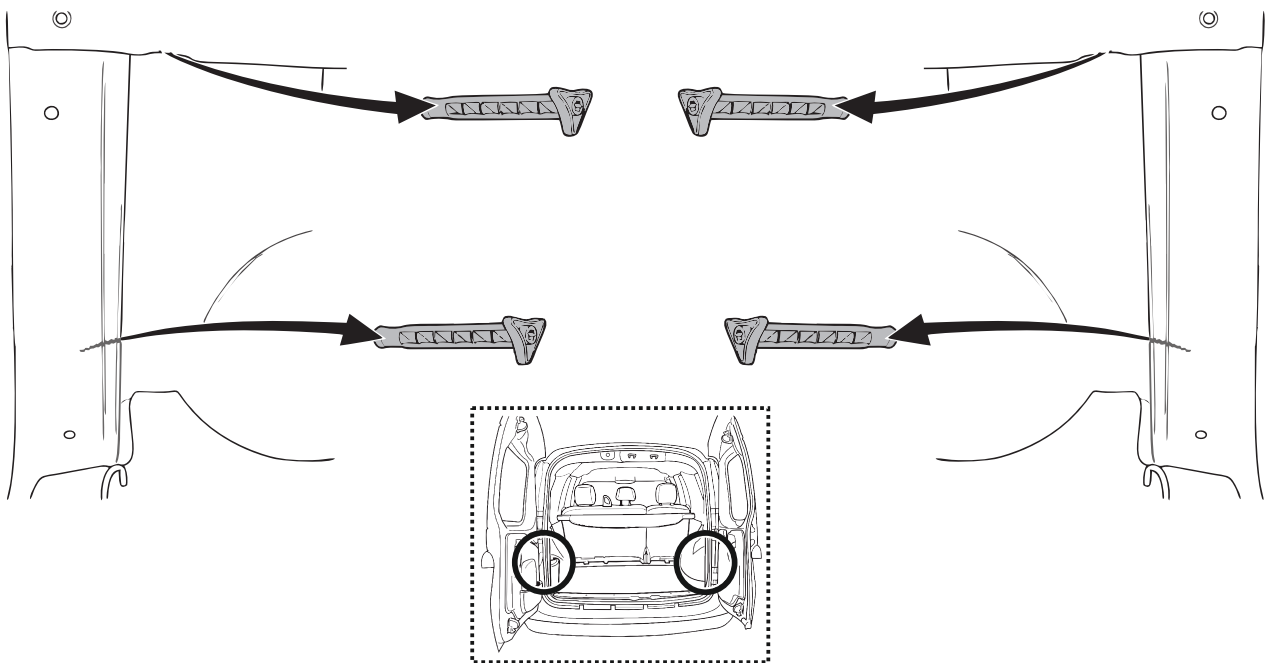
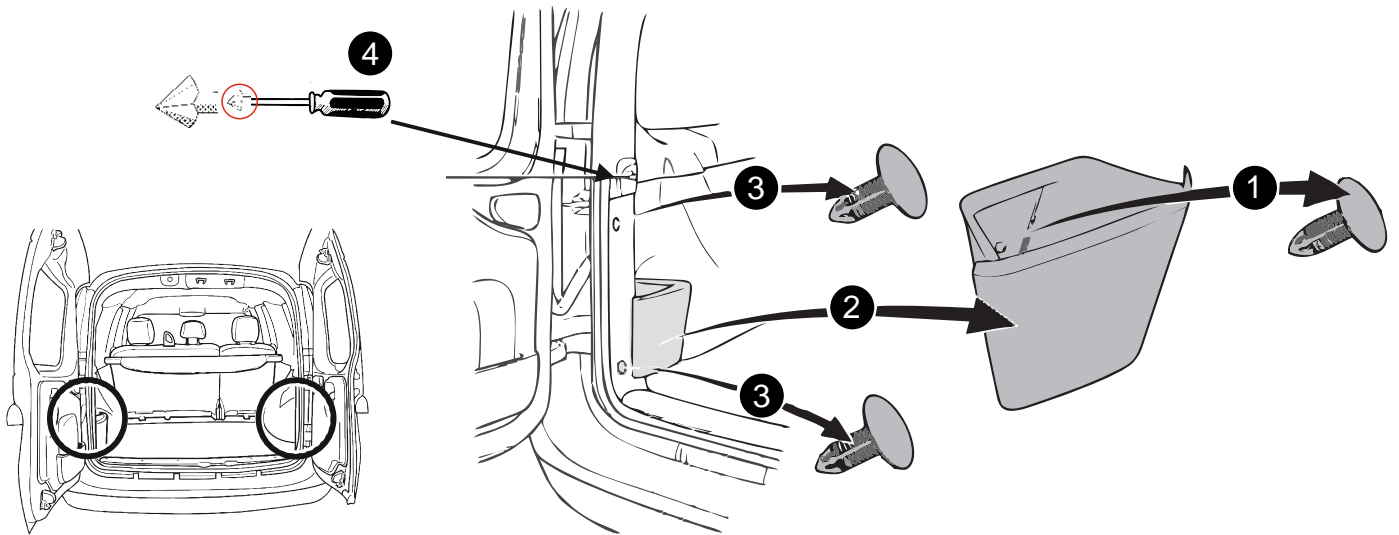
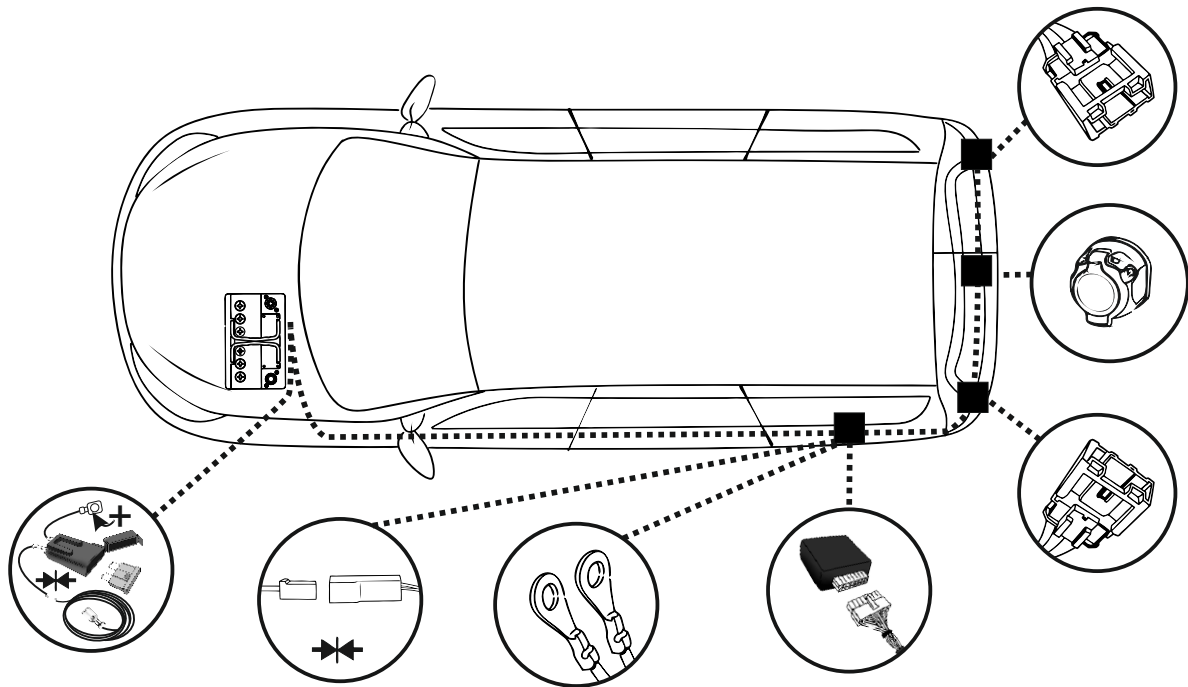


*

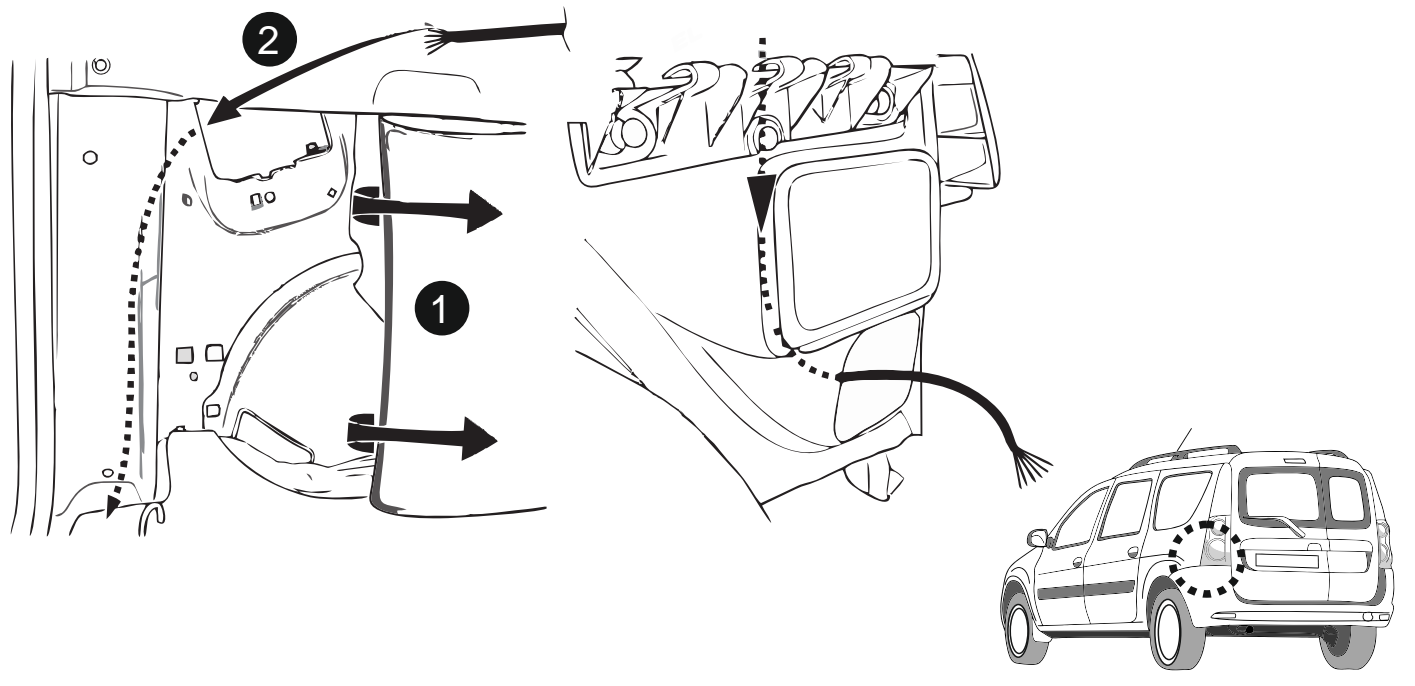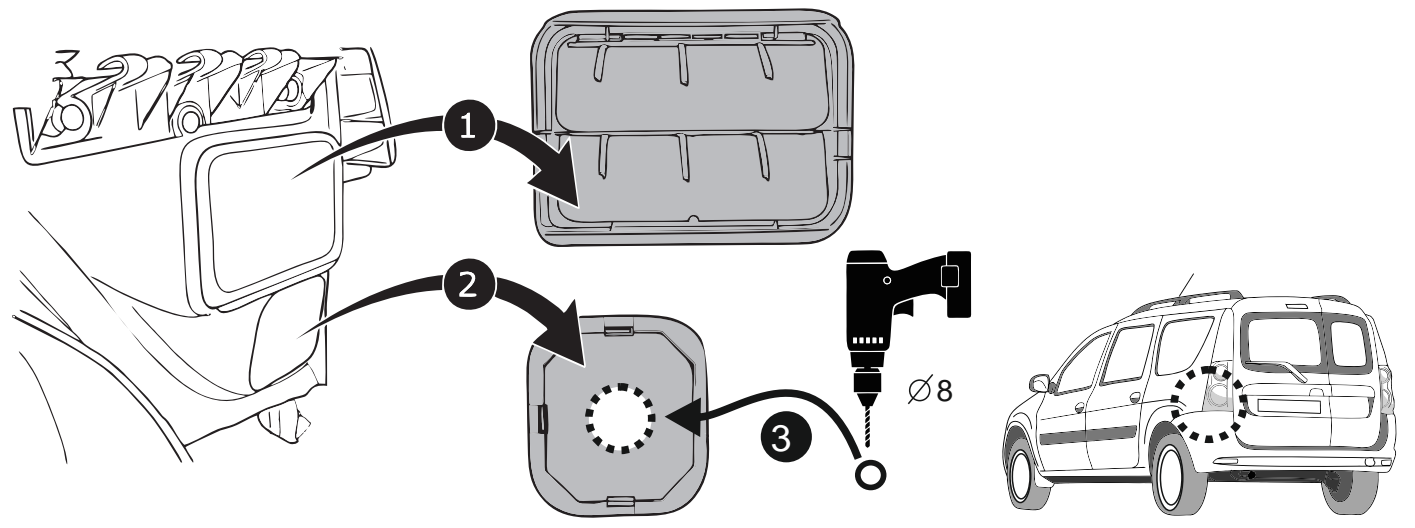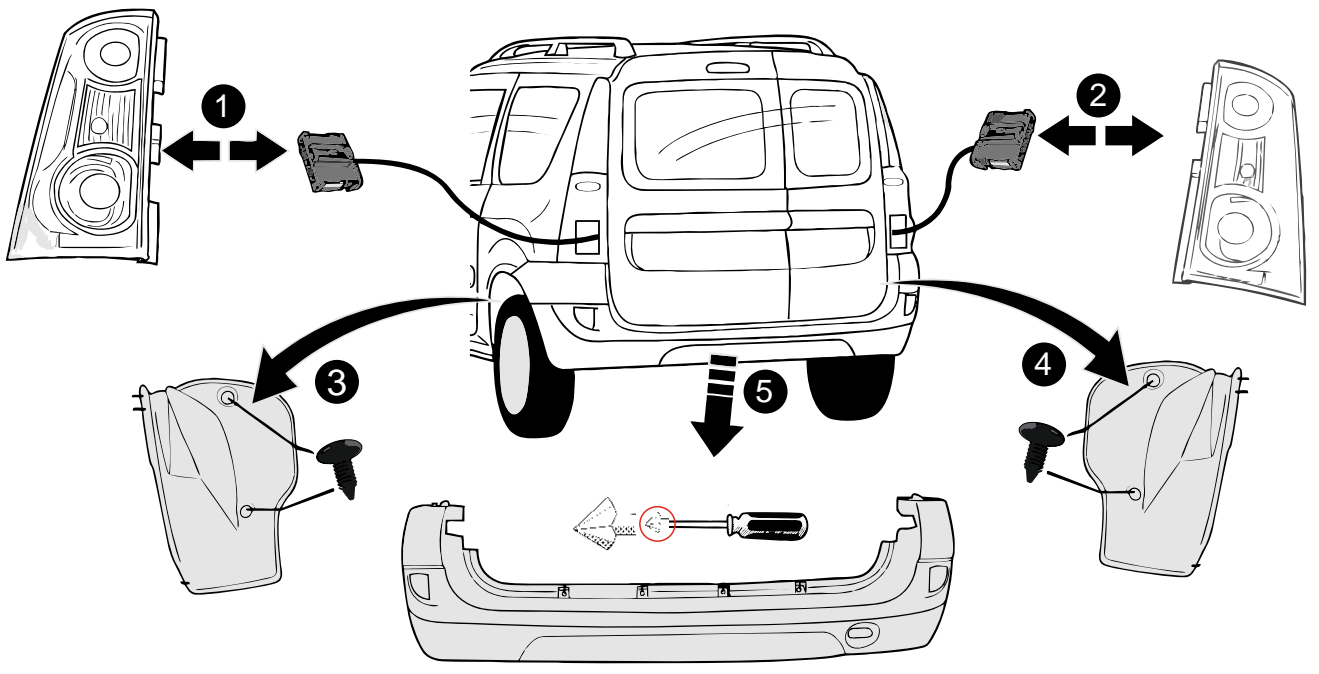

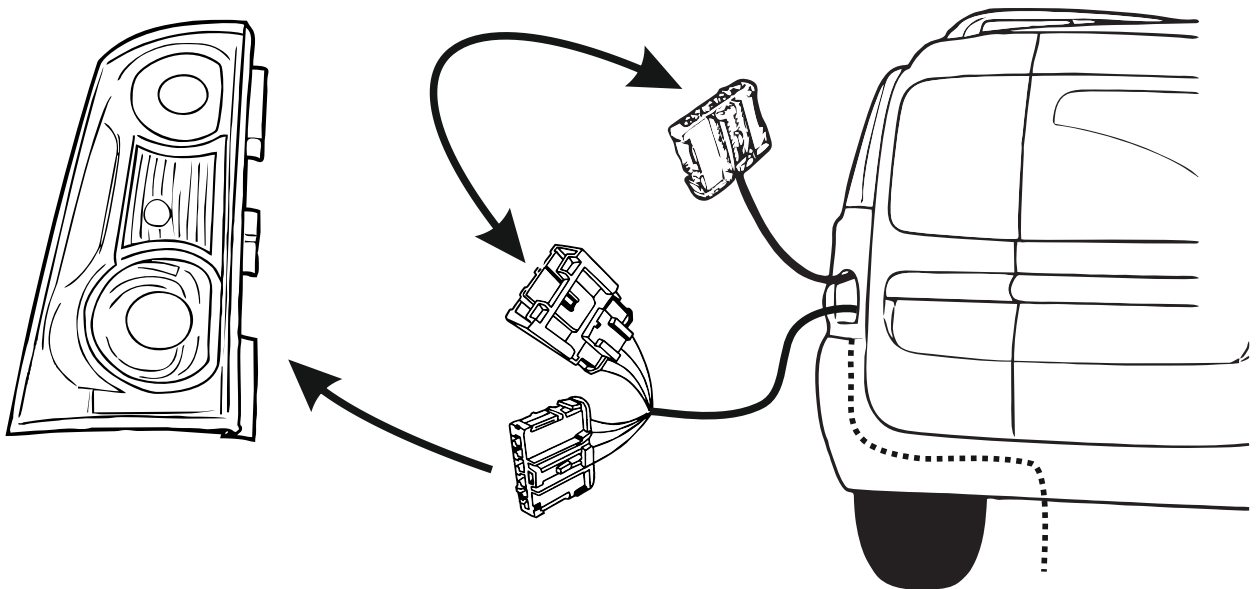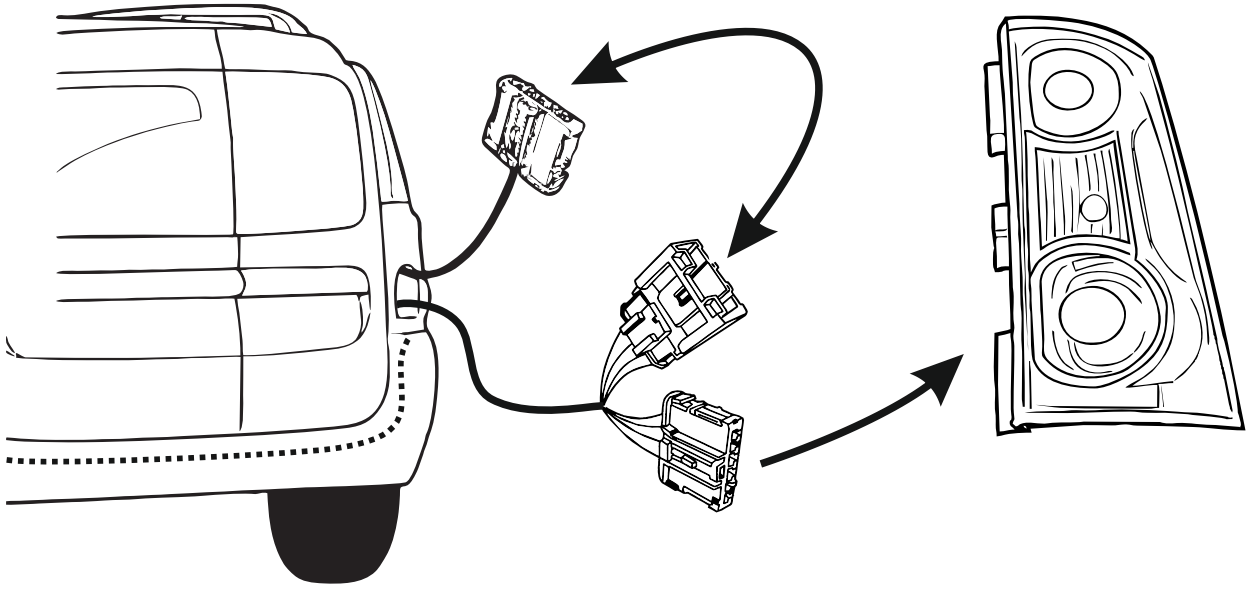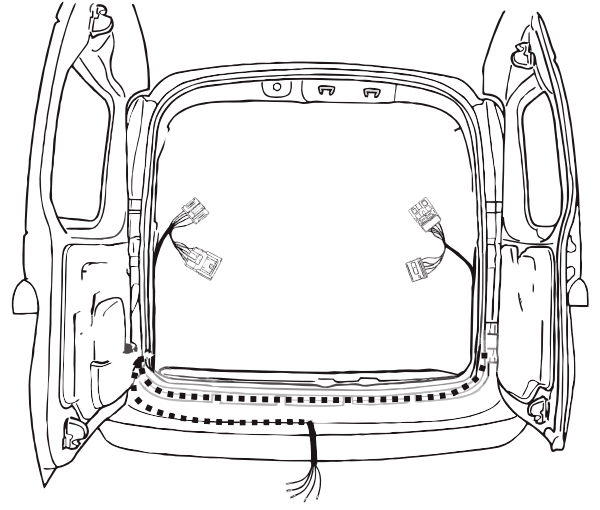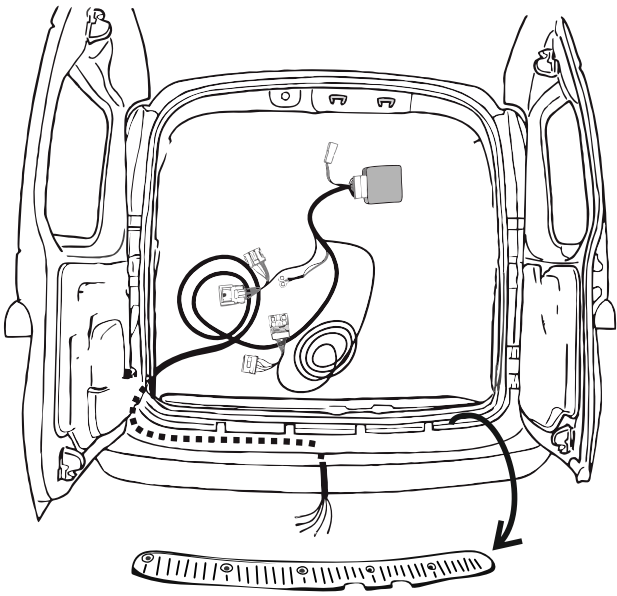

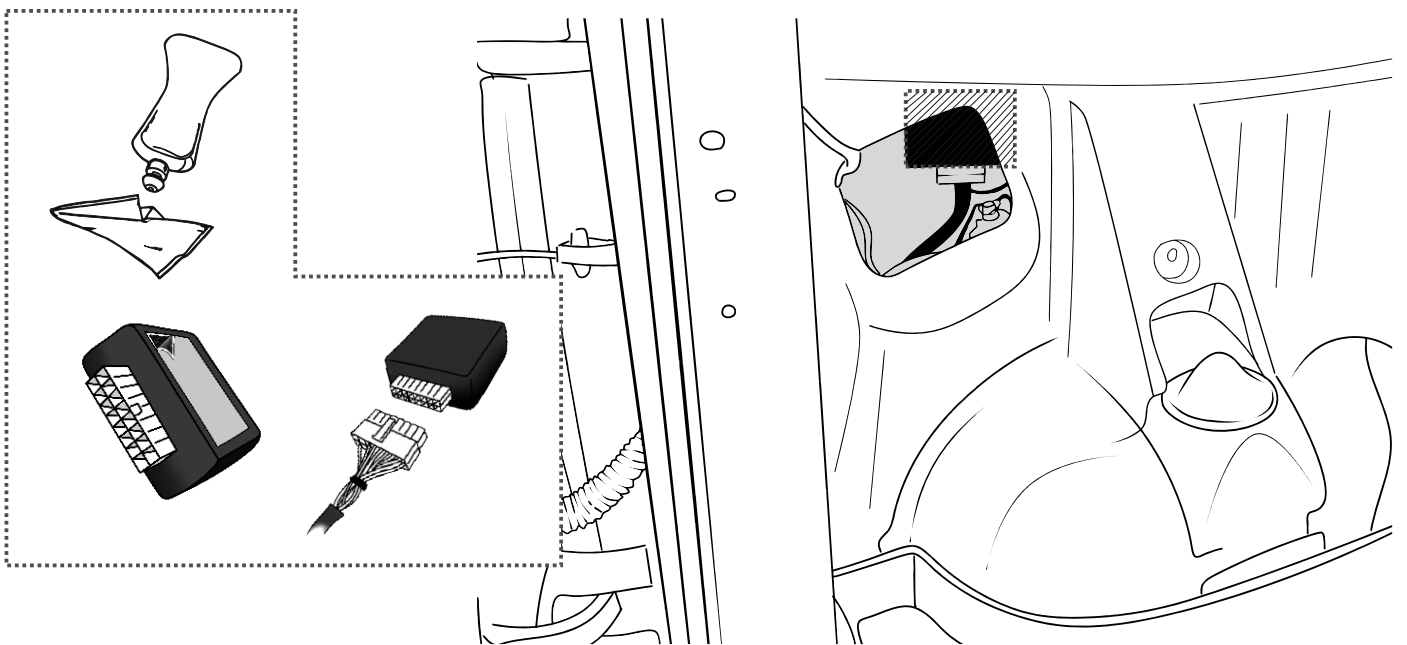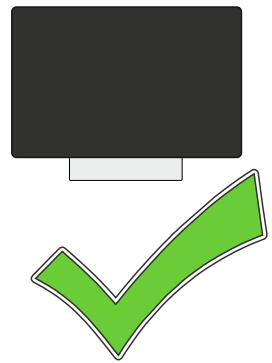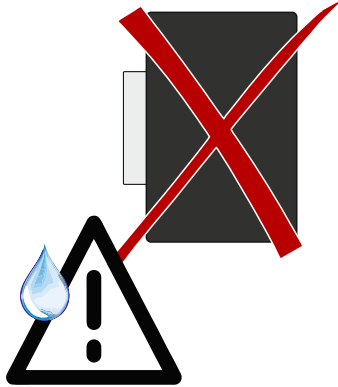
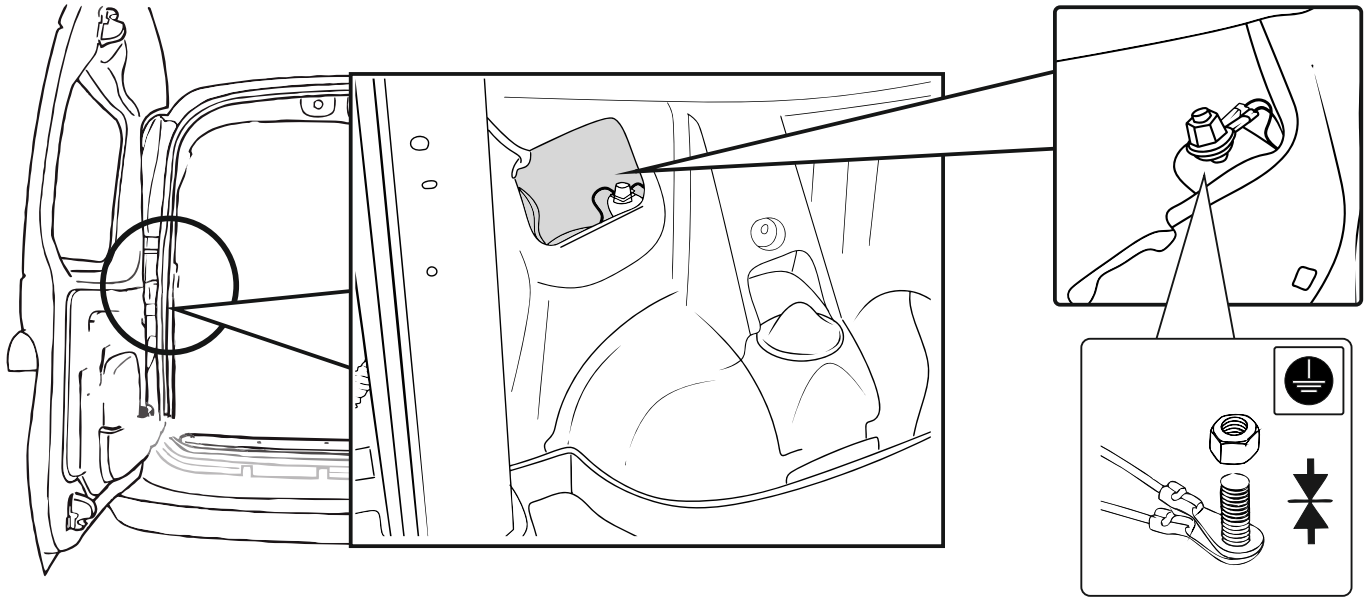


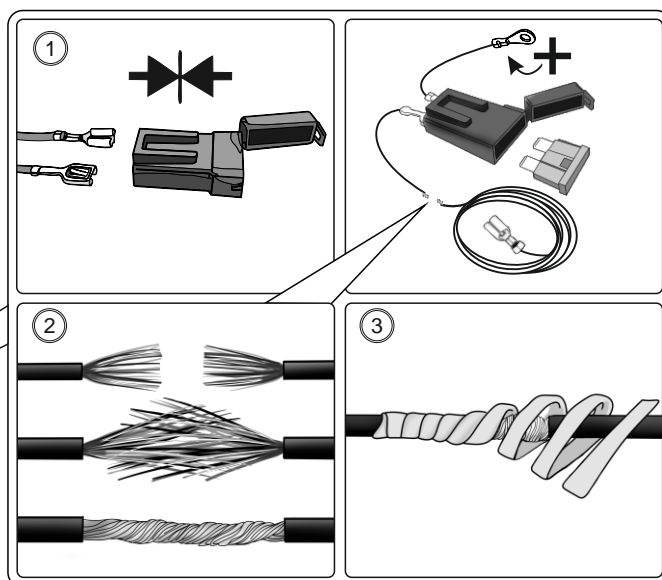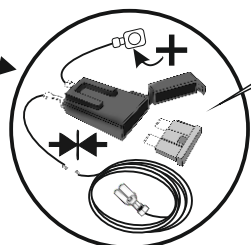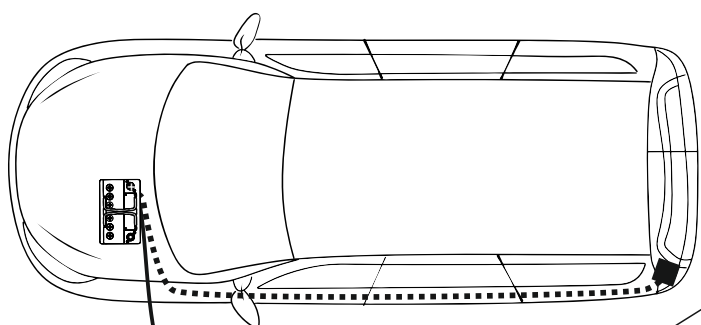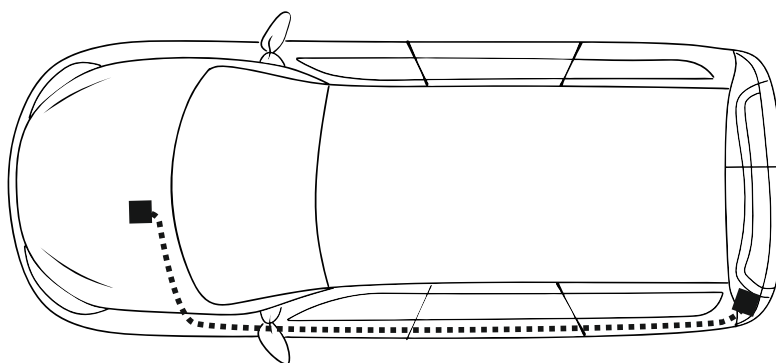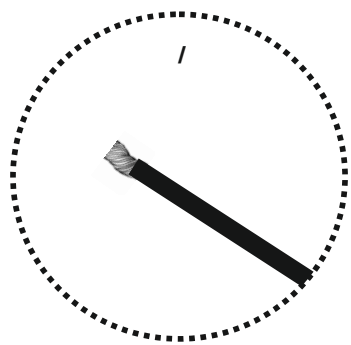

*



9200-76							
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
	21W	2x21W		21W	21W	2x21W	21W
					-		

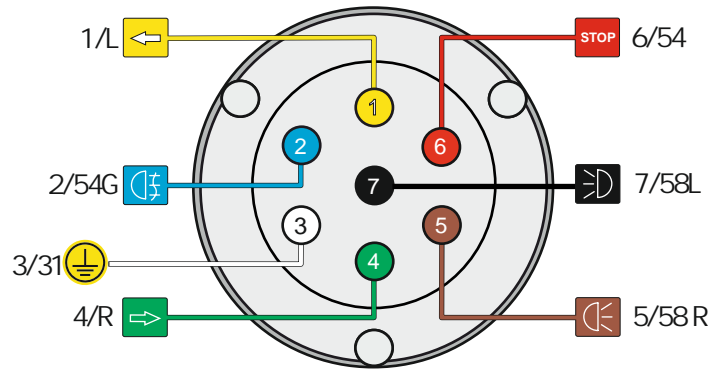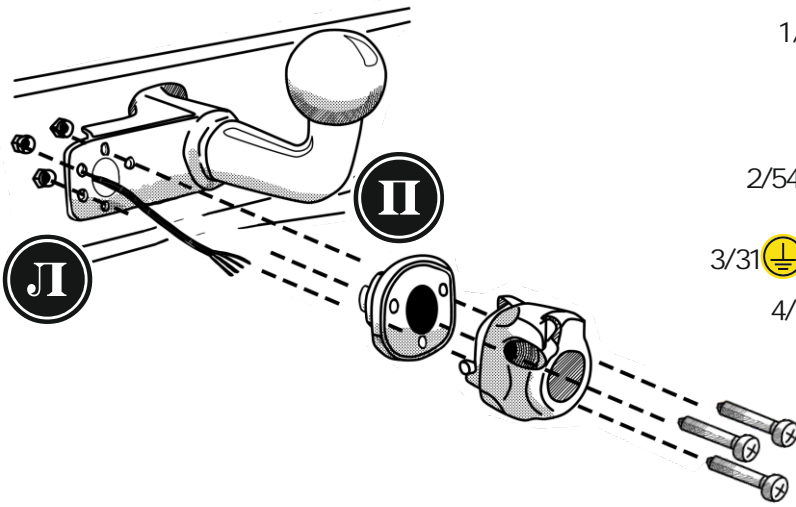

RUS

