


КА СW 71 101 020



# ИНСТРУКЦИЯ ПО МОНТАЖУ комплекта электропроводки для фаркопа с 7-ми контактной розеткой (ГОСТ 9200-76)






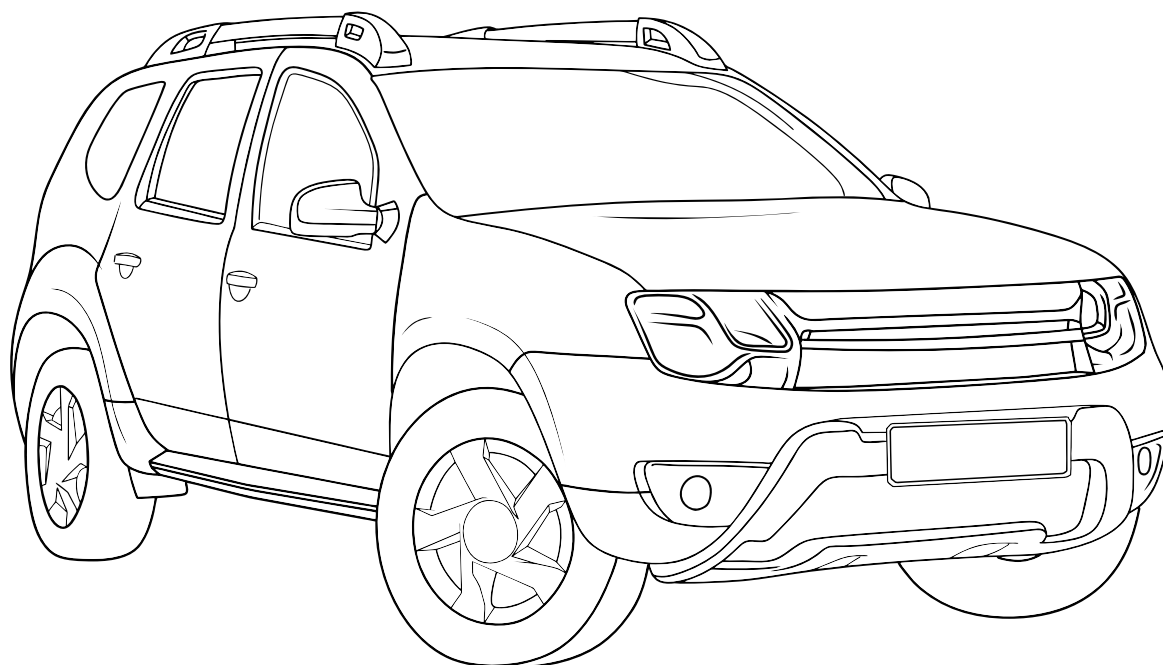


**Для Renault Duster 2015-2021**

- 1.
- 2.
- 3.
- 4.

!



\_\_\_\_\_

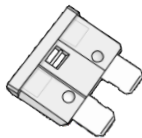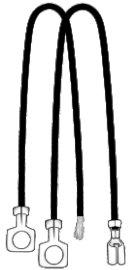
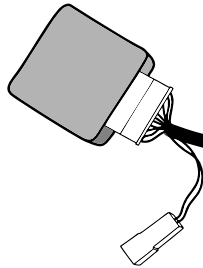
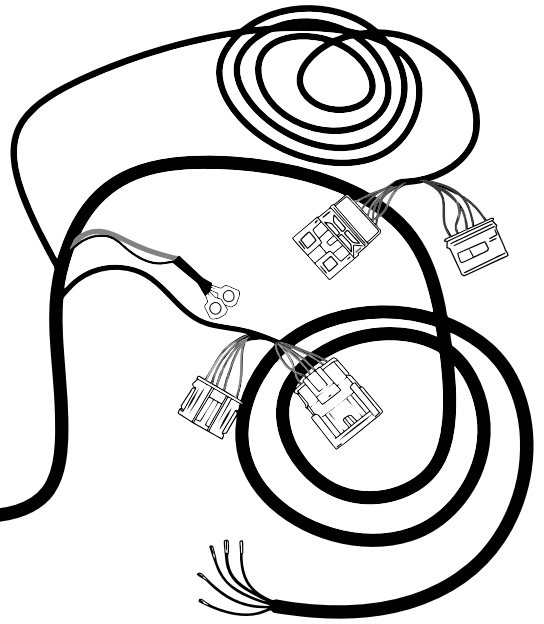
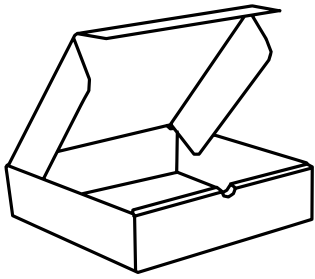







3x












\_\_\_\_\_

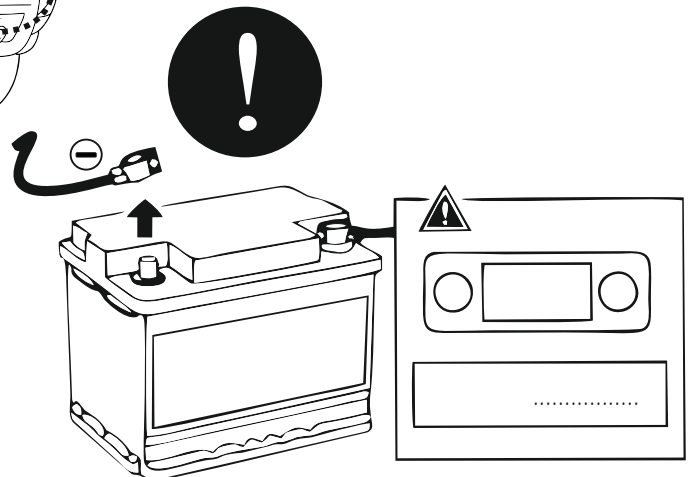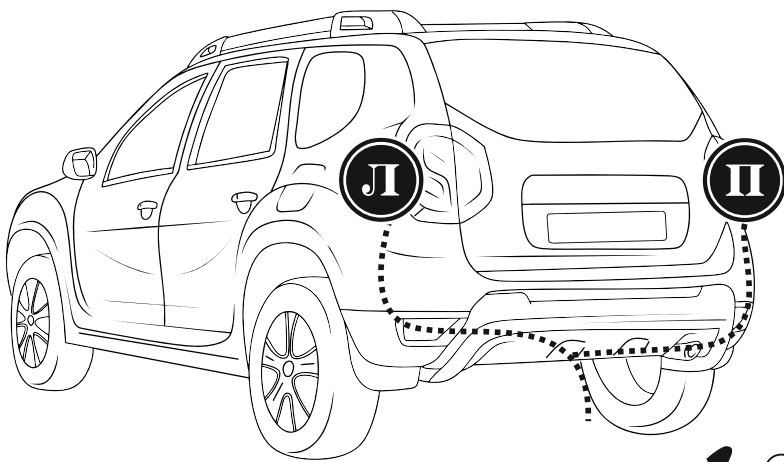

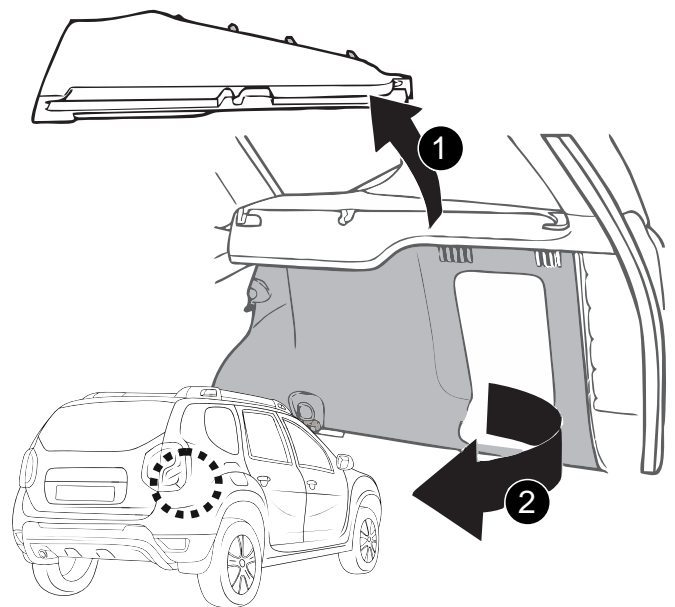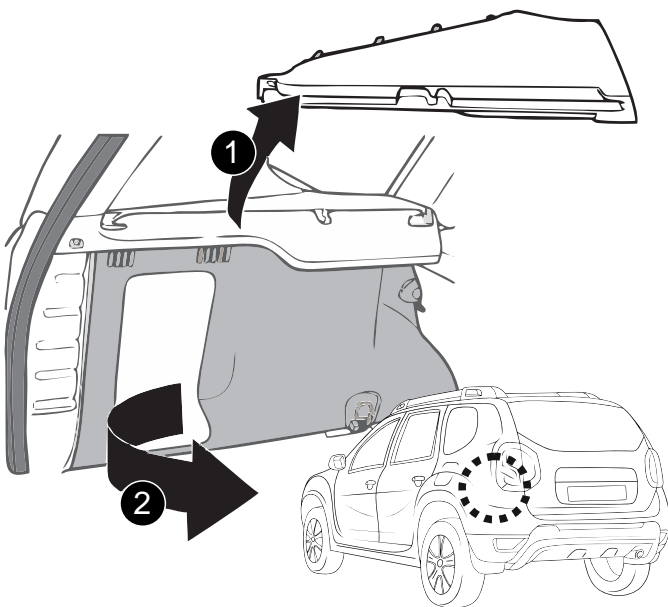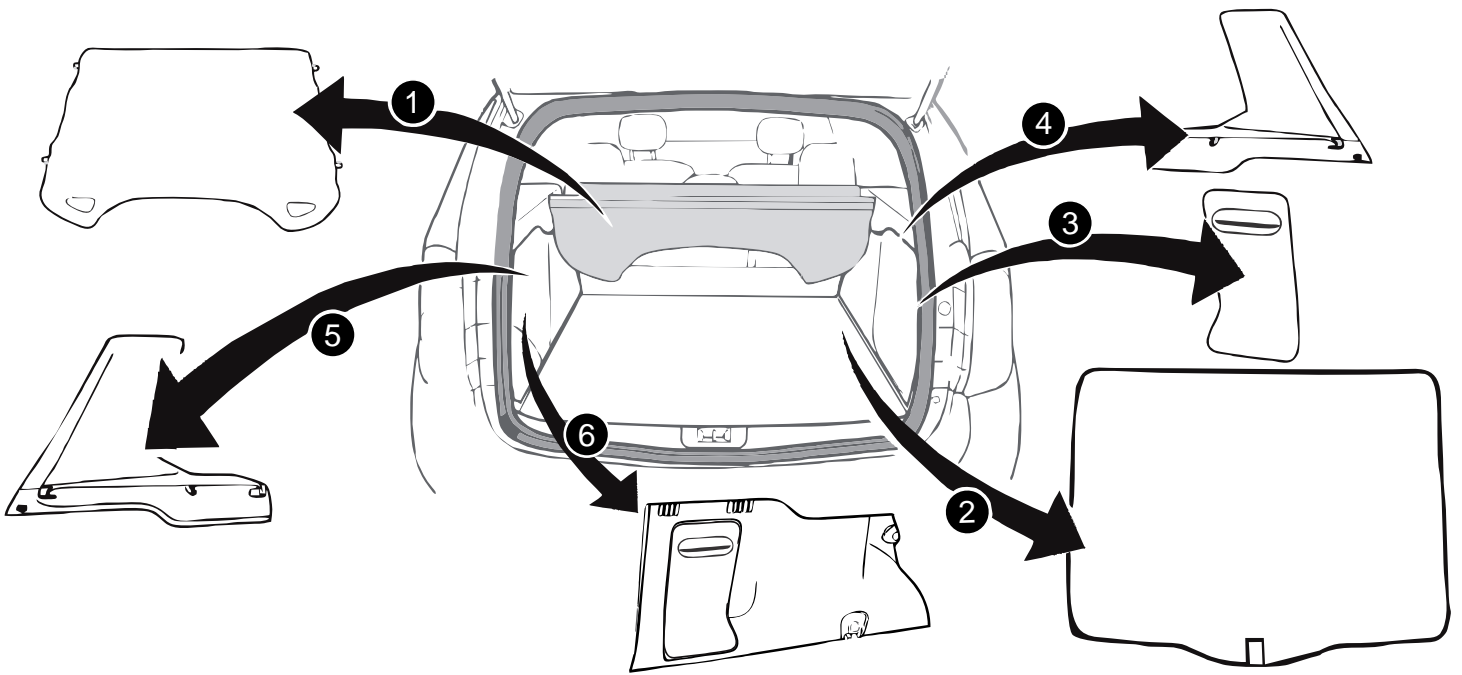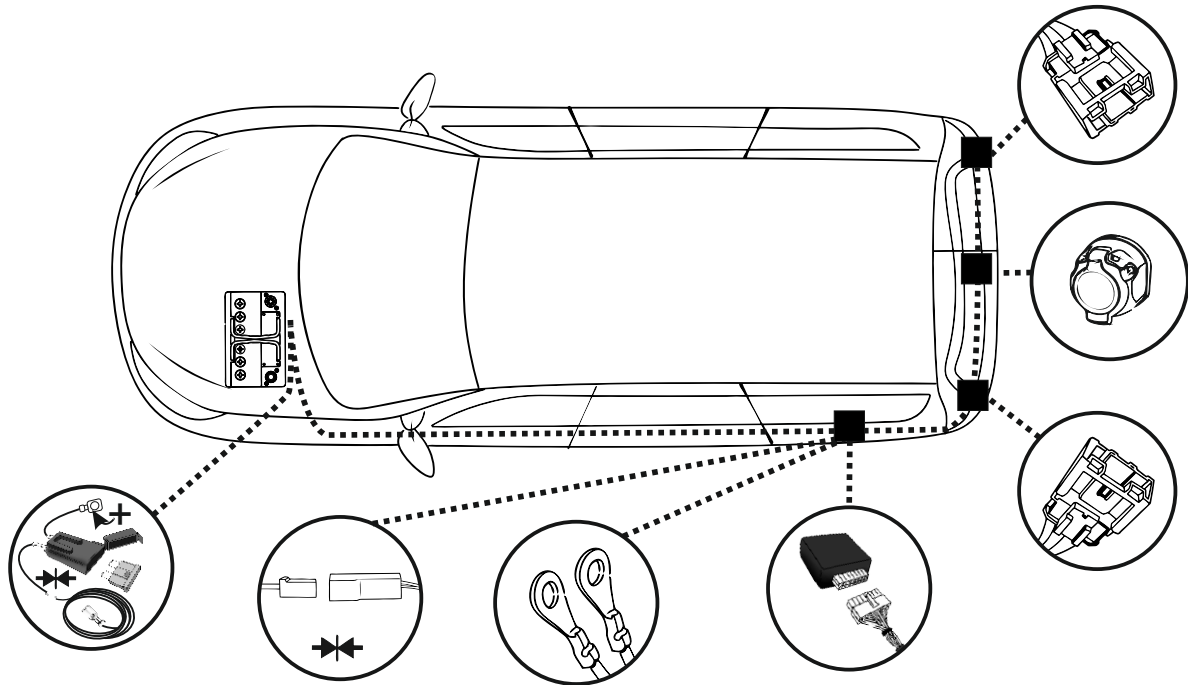

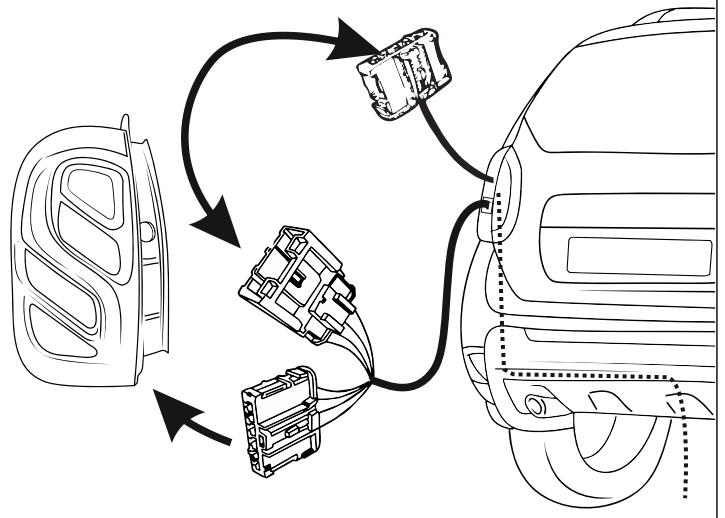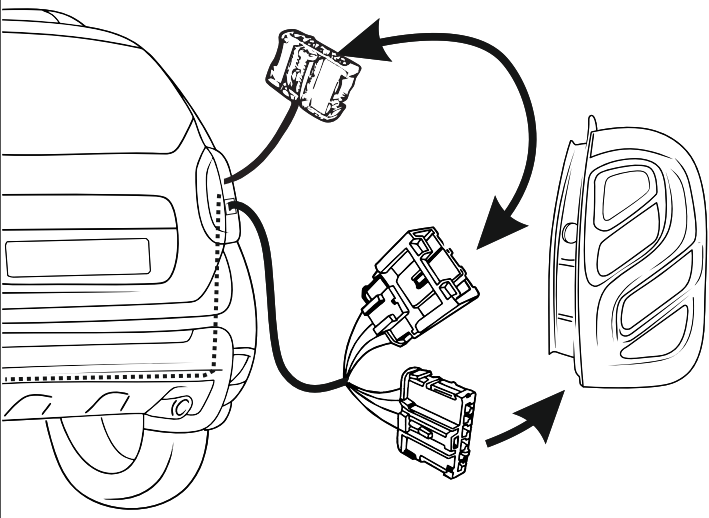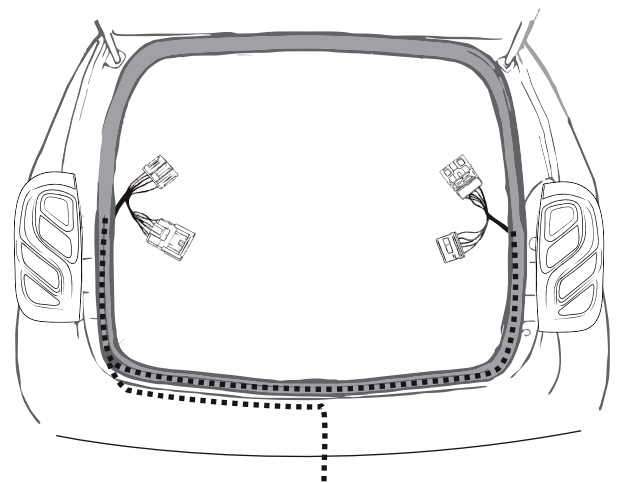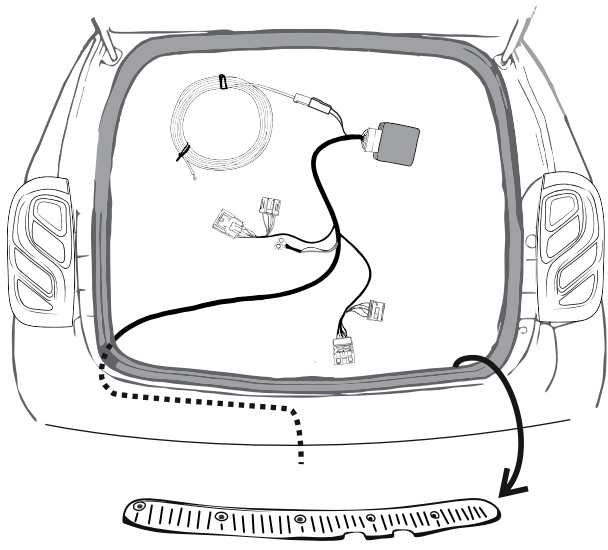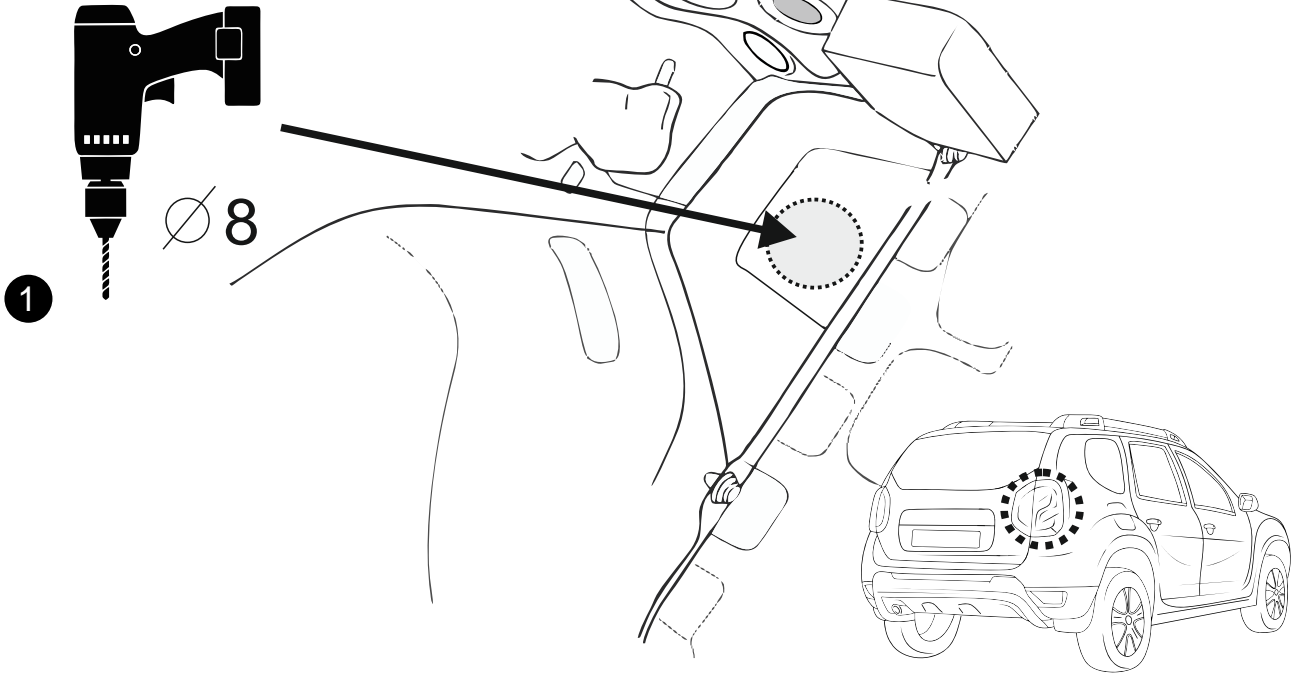

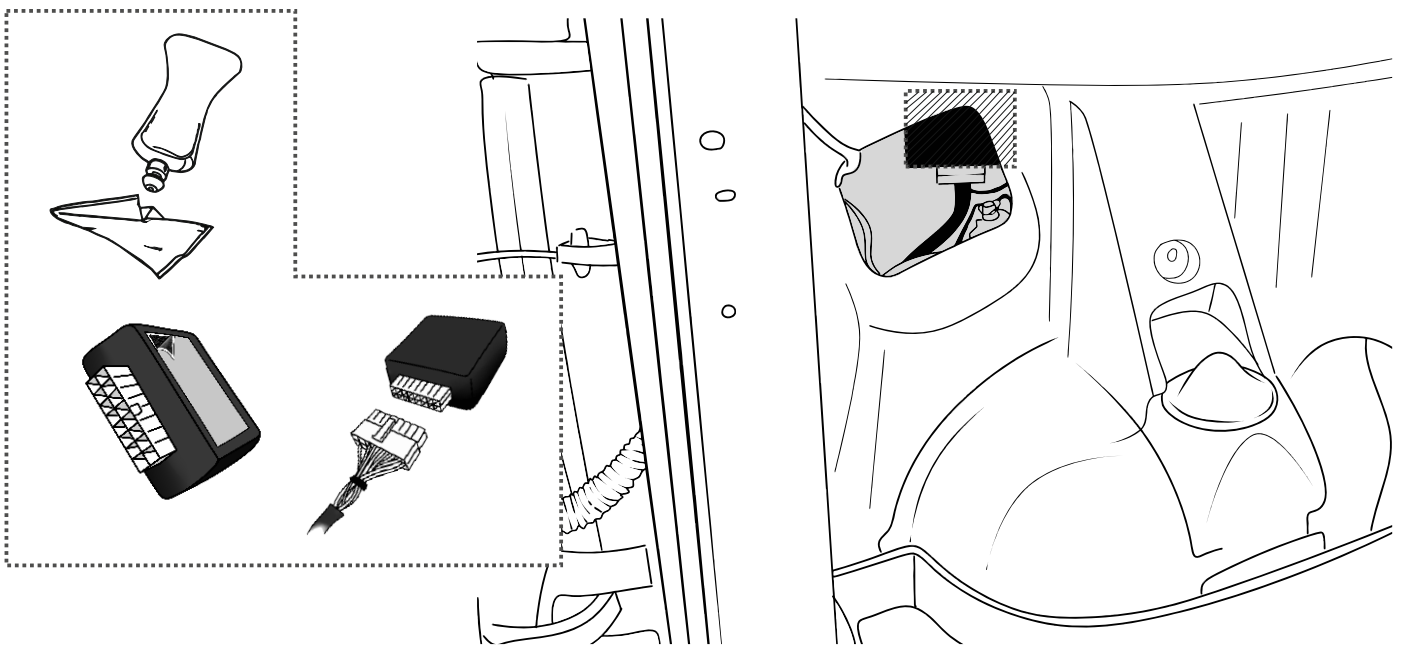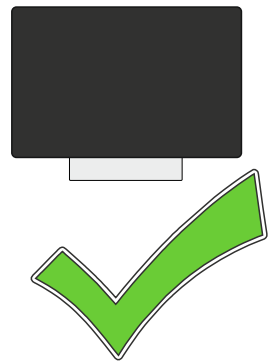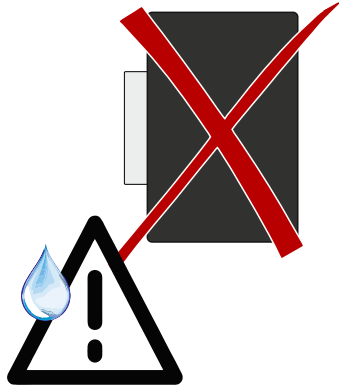
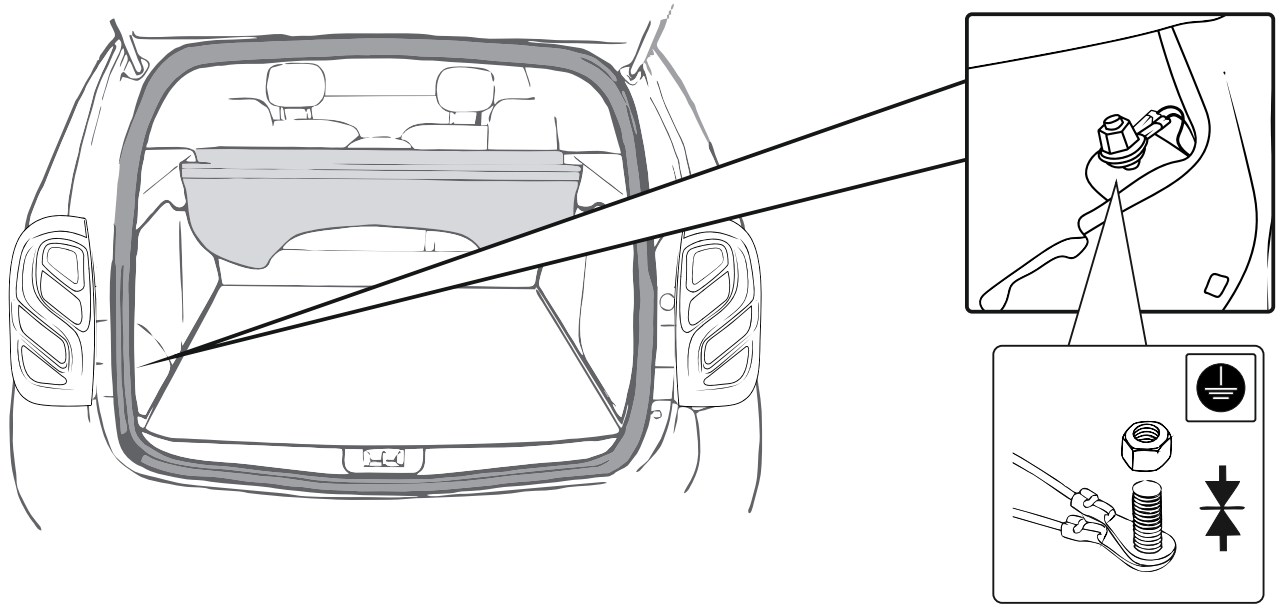


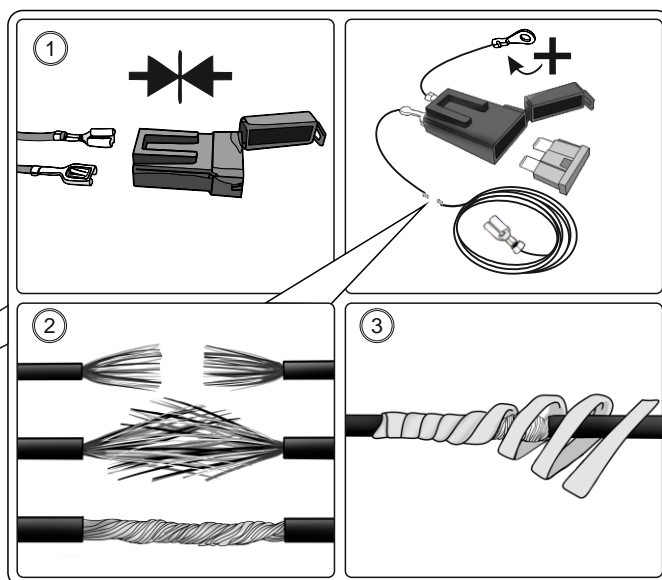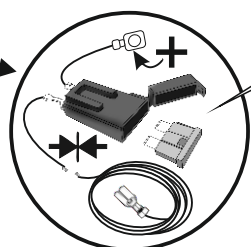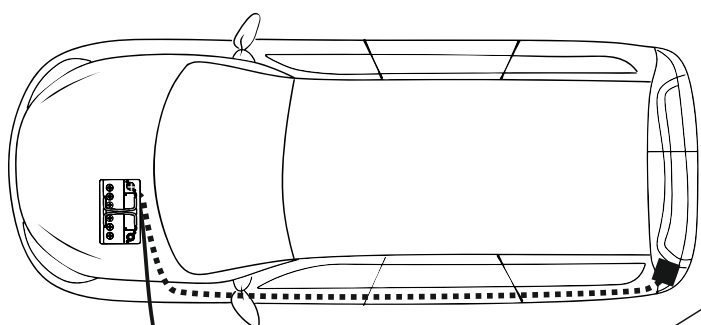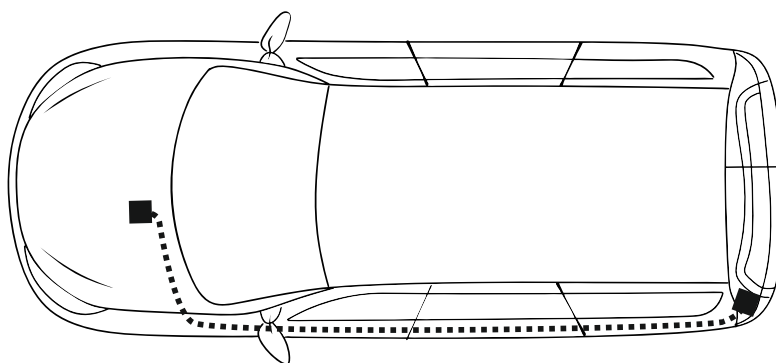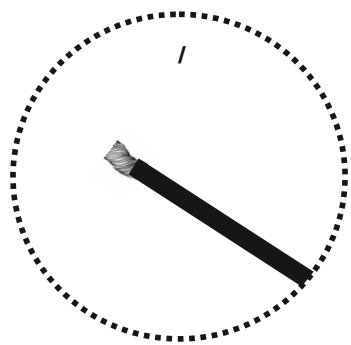

\*



9200-76							
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
	21W	2x21W		21W	21W	2x21W	21W
					-		

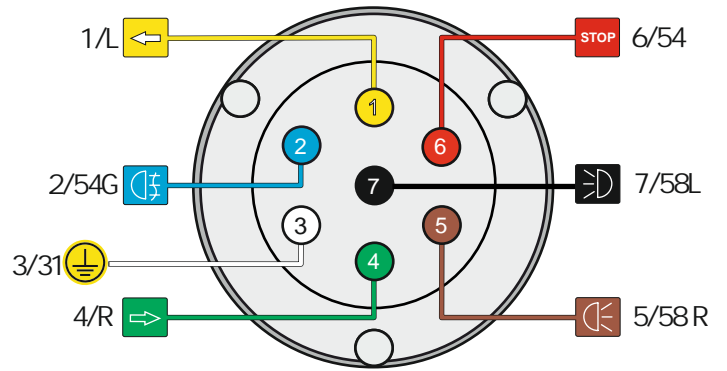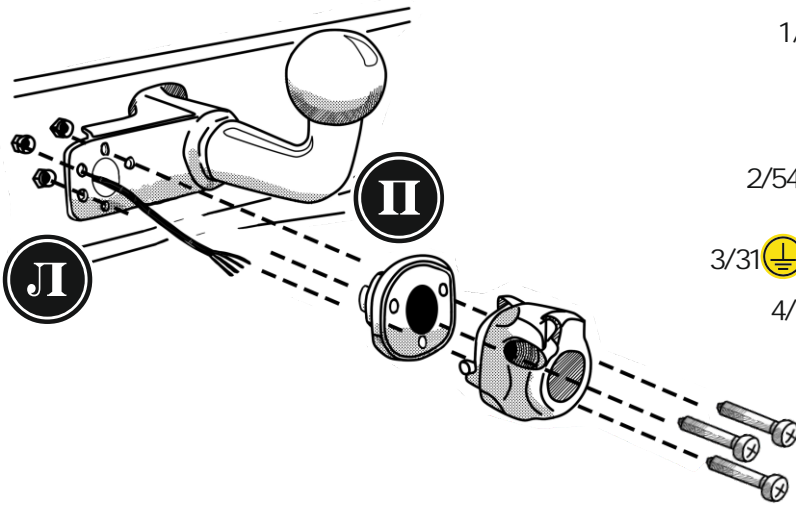

**RUS**

